SIDE PLATE (BMSC)

Included:

(5) 1/4-20x3/8 socket button

(3) 1/4-20x5/8 socket button

(4) M3x12mm Phillips pan head (*Anton Bauer*)

(4) M3x10mm Phillips pan head (*Hyperdeck Shuttle*)

(4) M3x8mm Phillips pan head (*IDX/Swit*)

(1) M2.5x4mm socket cap screw (*Odyssey 7*)

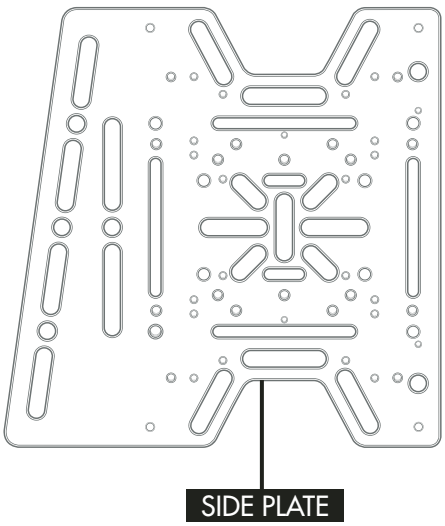

INSTALLATION

1. For single **PLATE** attachment, select **PLATE** and three **1/4-20x3/8 SCREWS**.
2. Select **CAMERA**, locate **1/4-20 HOLES** on right or left side of **CAMERA BODY** and **SIDE PLATE**.
3. Align **1/4-20 HOLES** on **CAMERA BODY** and **SIDE PLATE**, select and tighten **1/4-20x3/8 SCREWS** with allen wrench.

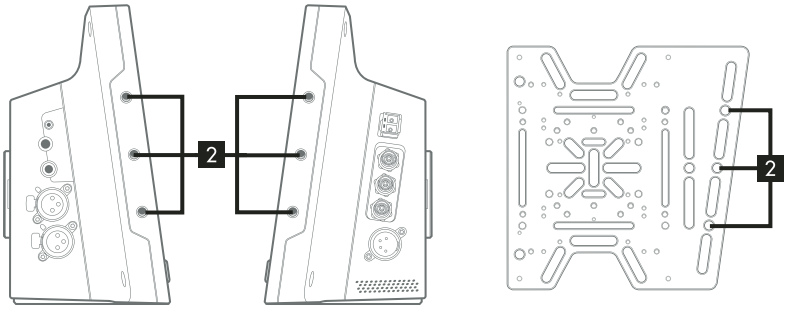

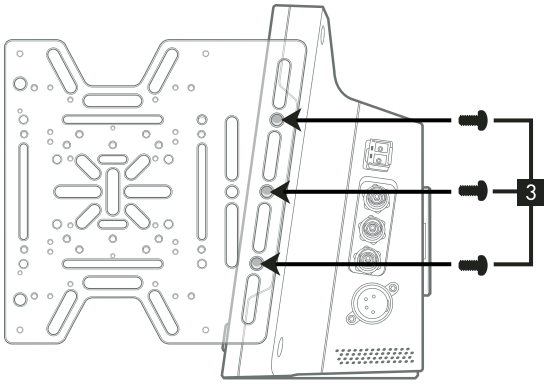

4. For multiple **PLATE** attachment, align **PLATES** to **CAMERA BODY** as shown below, select and tighten **1/4-20x5/8 SCREWS** with allen wrench.

For attaching accessories find appropriate threaded holes by using the **HOLE CHART** below. Insert and tighten **PHILLIPS PAN HEAD SCREWS** or **1/4-20 SCREWS** into corresponding hole as shown on the **HOLE DIAGRAM** on the next page.

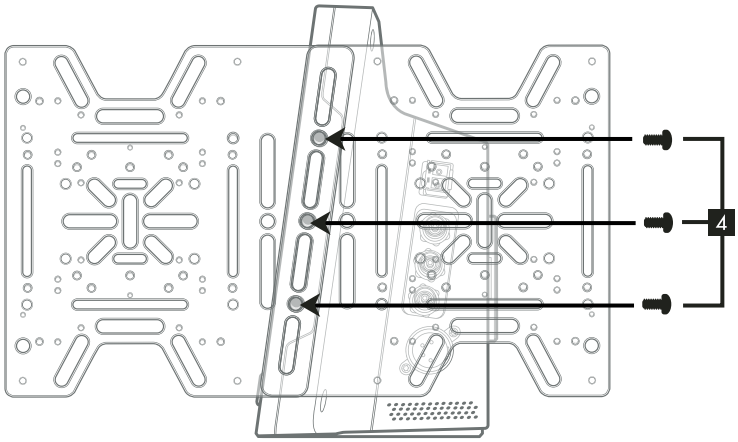

HOLE CHART

A= Anton Bauer

B= Hyperdeck Shuttle

C= IDX/Swit

D= Odyssey 7 *(NOTE: Install M2.5 locating socket cap on plate prior to installing 1/4-20 screw)*

© Wooden Camera, Inc. 2011-2014

SIDE PLATE (BMSC)

Additional Attachment Holes:

= 1/4-20 Pass Through Holes = Wireless Audio Receiver = Side Plate Cable Clamp

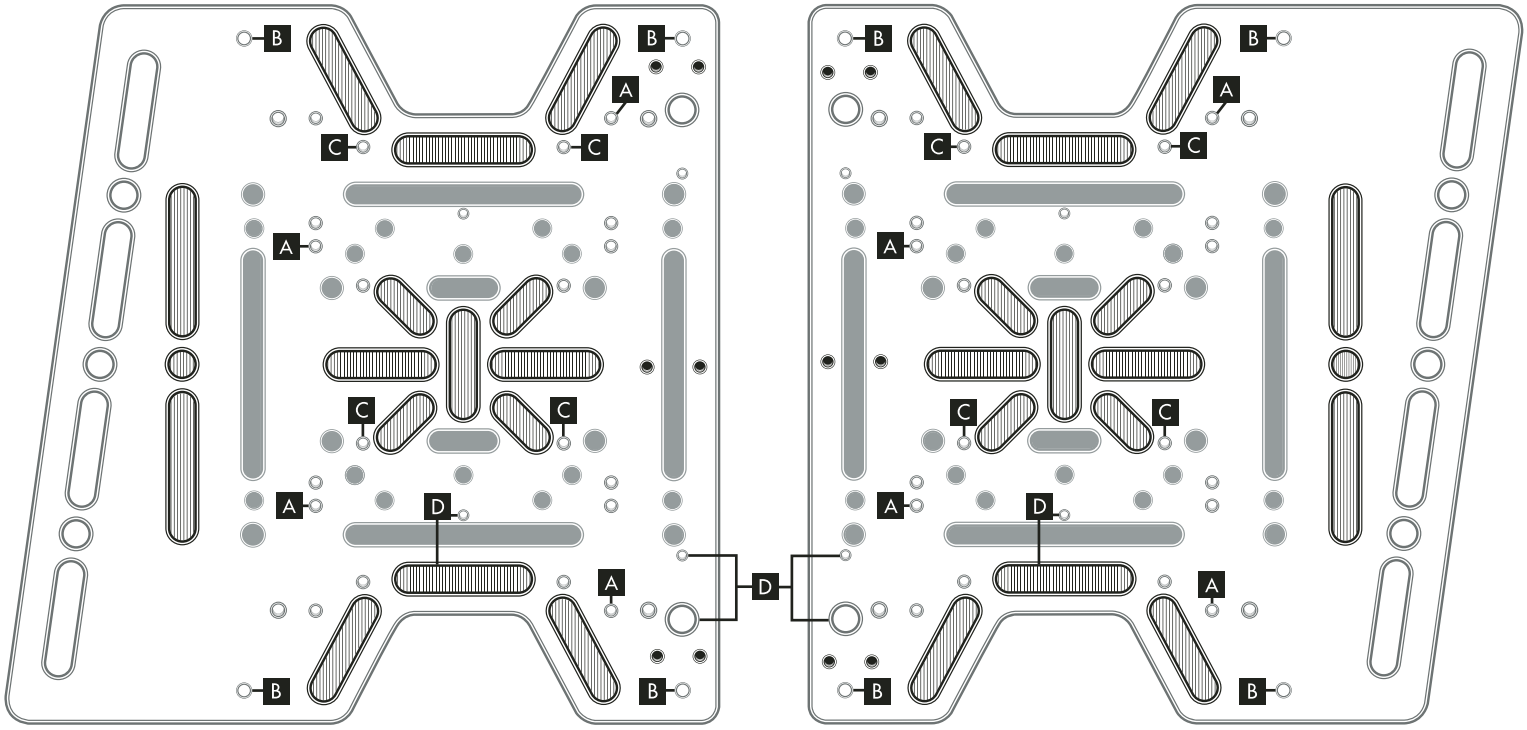

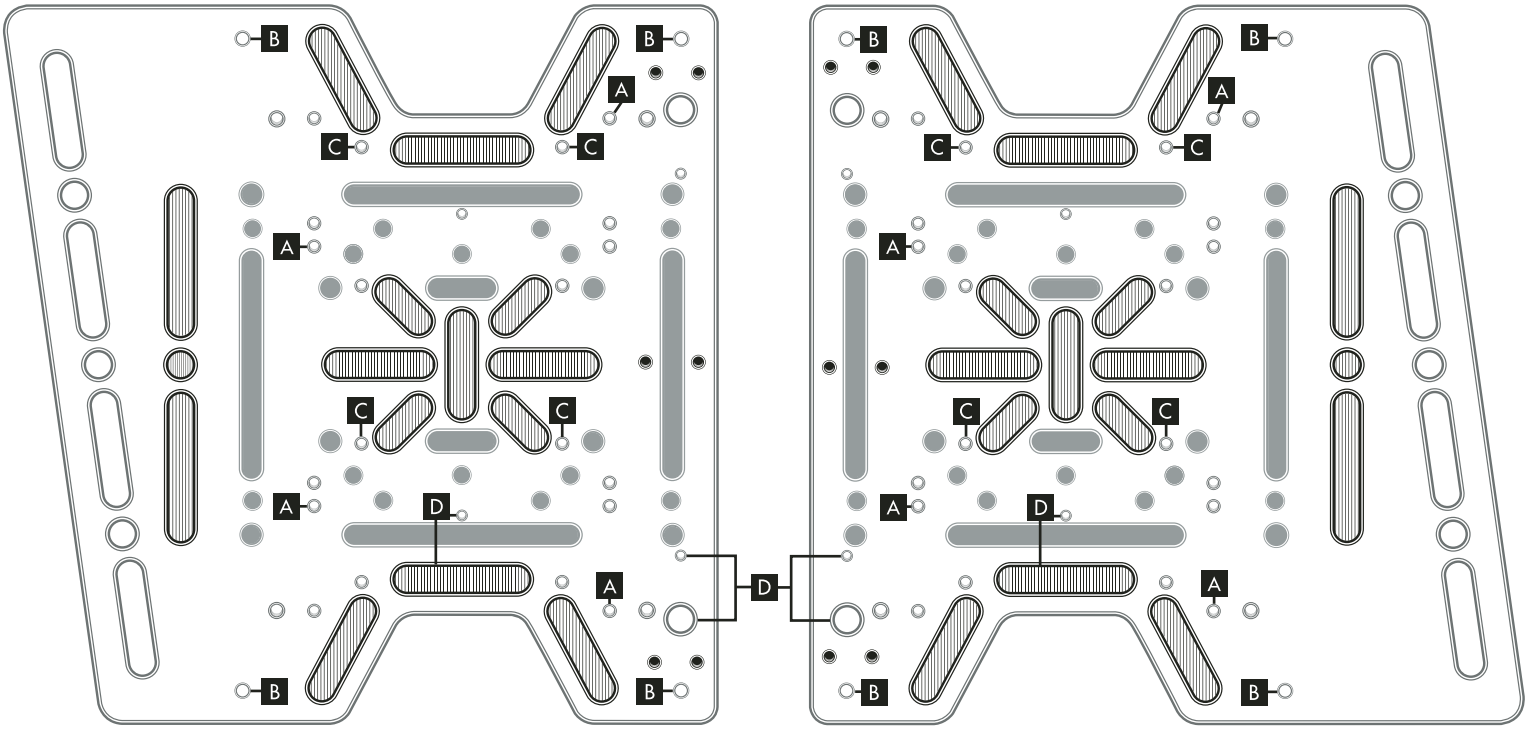

© Wooden Camera, Inc. 2011-2014